



Installation manual AC90LA

1. Stop valve components.

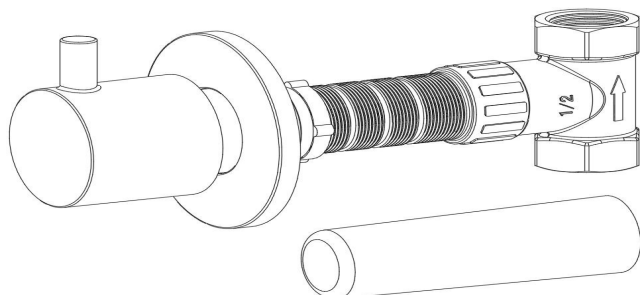


2. Before installation, remove the parts supplied with the product, as shown in the illustration. Then place the protective cap on the valve.

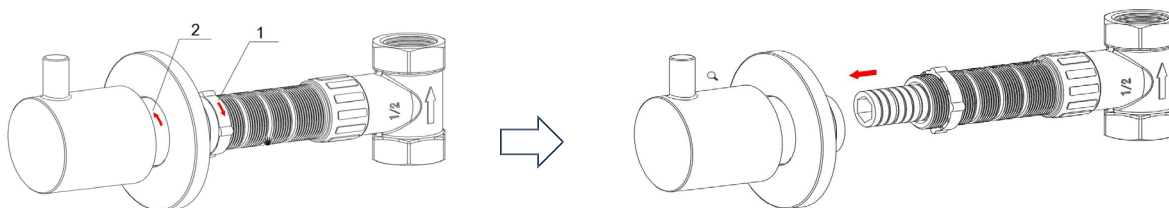

Step 1: Turn the fastening ring 1 to 2 turns in the direction of the arrow.

Step 2: Turn the decorative ring in the direction of the arrow and remove it.


Step 3: Detach the knob/handle from the valve in the direction of the arrow.

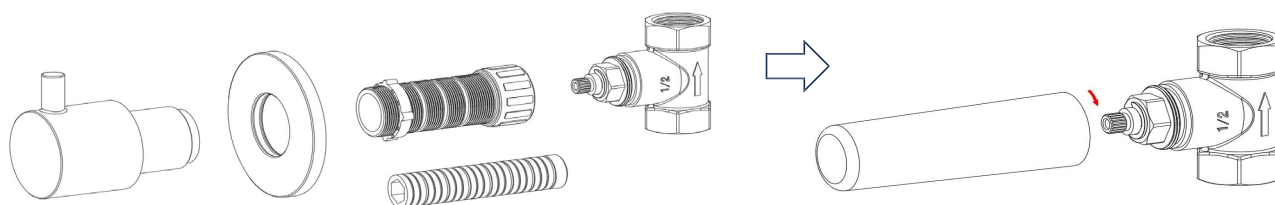

Step 4: Step 4, remove the parts on the left of the figure above, leaving only the valve.


Step 5: Screw the protective cover on the valve body in the direction of the arrow.

3. Install the rosette and fix the handle

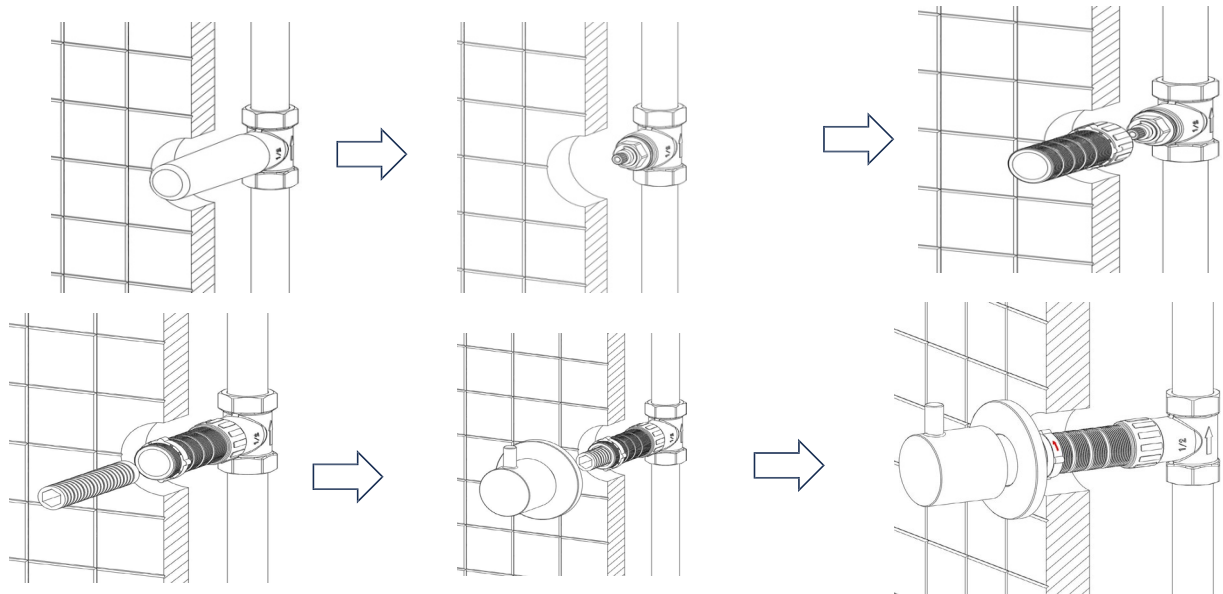


4. Installation and adjustment (if optional)

If the valve is installed and extends too far from the wall, preventing the rosette from fitting properly against the wall, the installation can be adjusted by shortening the plastic extension tube.

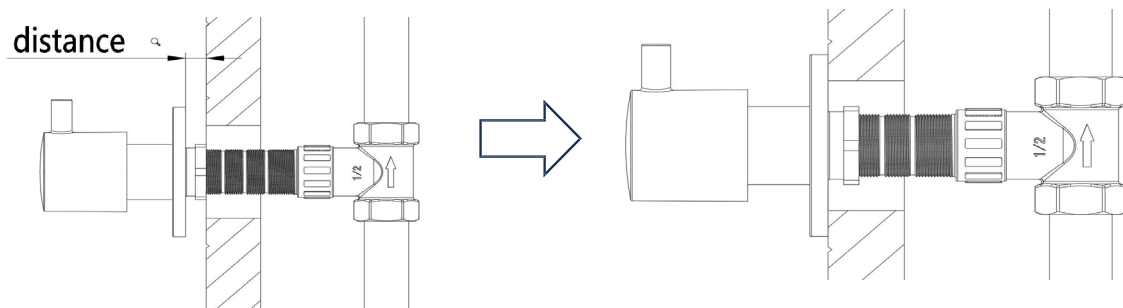

The plastic extension tube can be cut off as follows:

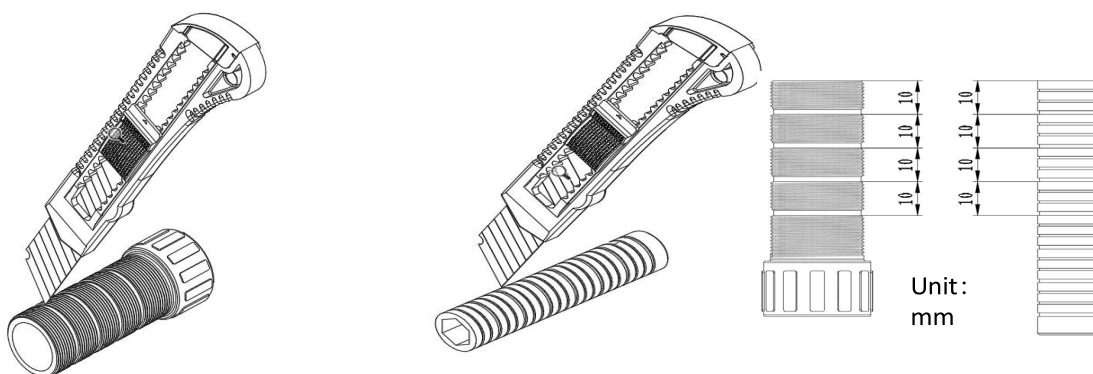

Refer to the minimum distance between the rosette and the wall and cut off the same length of the two plastic extension pipes in the above figure respectively.

*The position of each 1 cm length of the extension tube is marked on the figure for reference.