




Thermostatic shower mixer
installation instruction

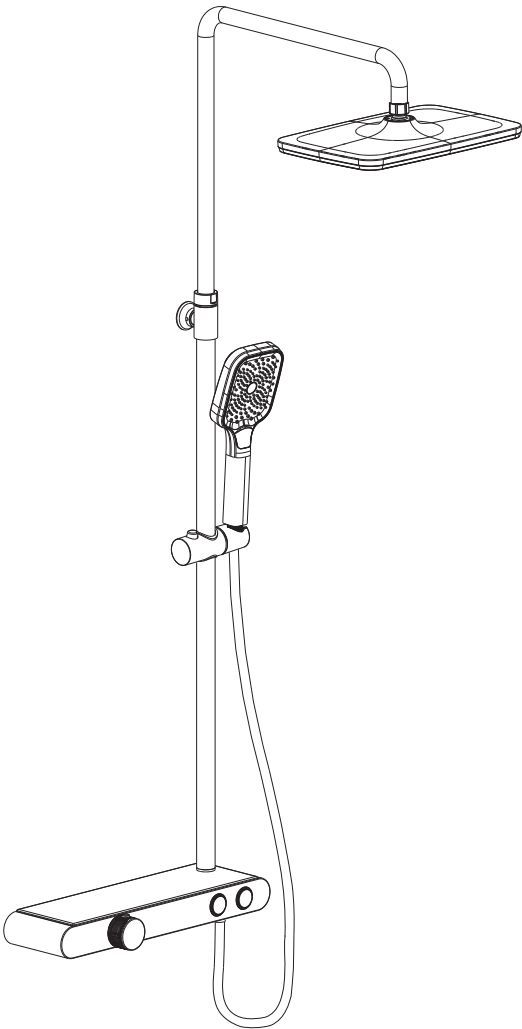


1

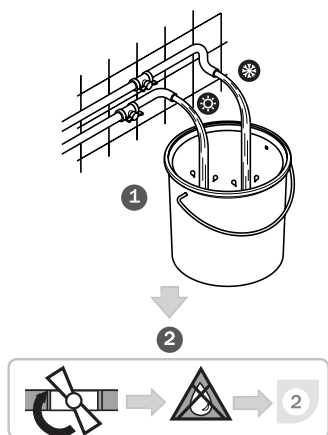


2

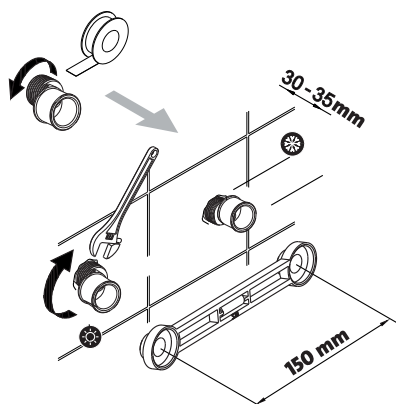


3

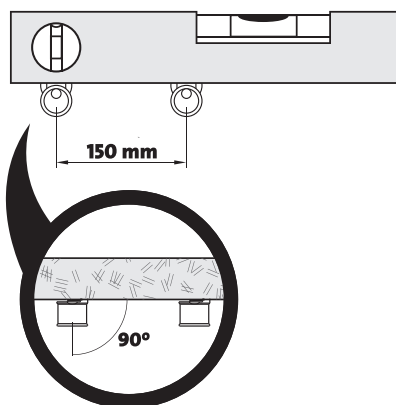


4




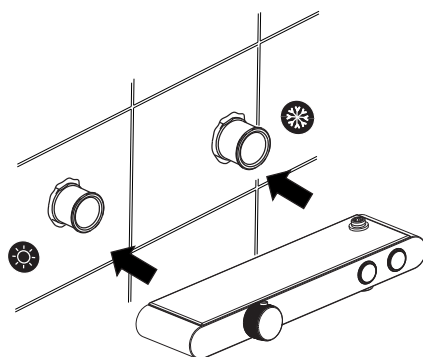



5

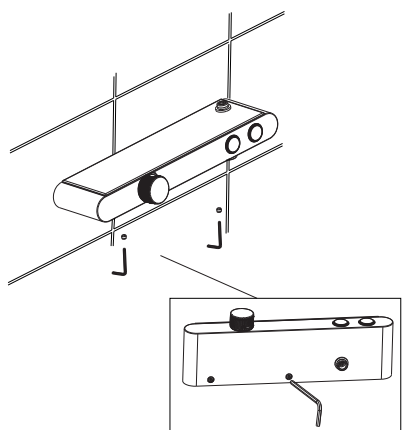

6

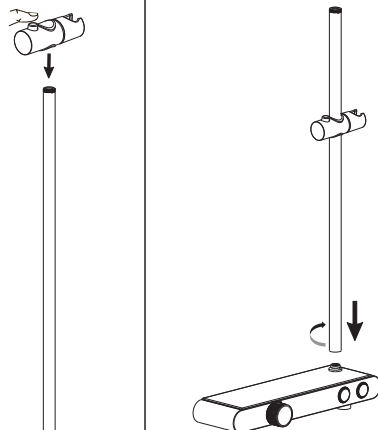

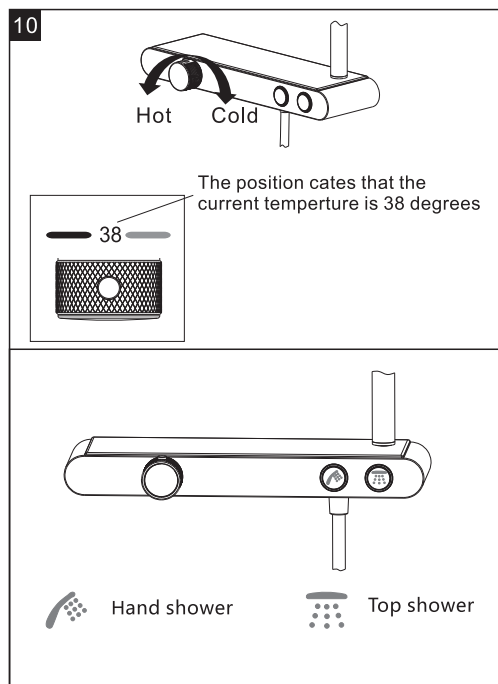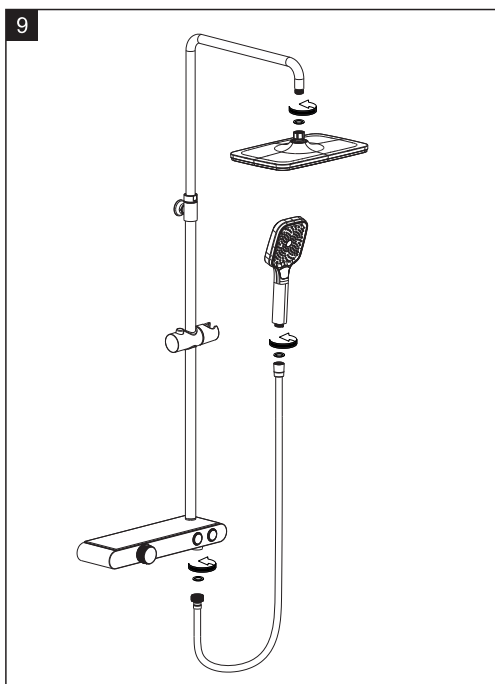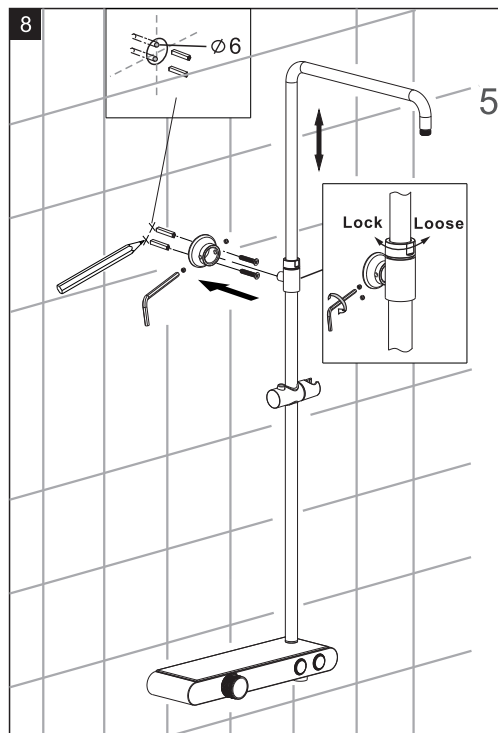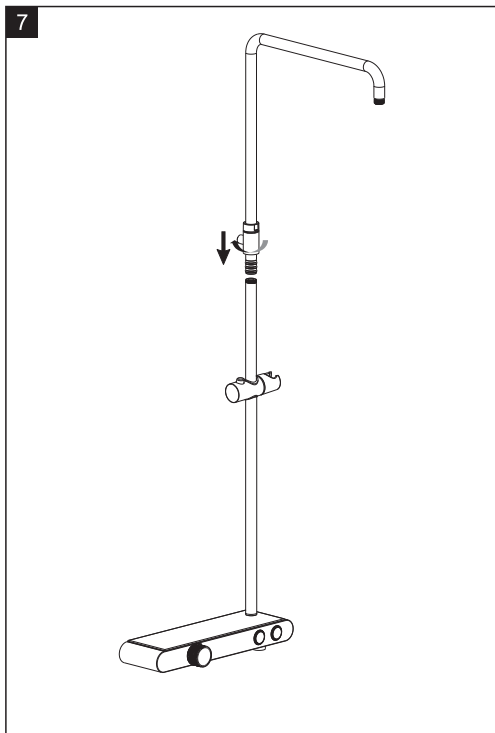

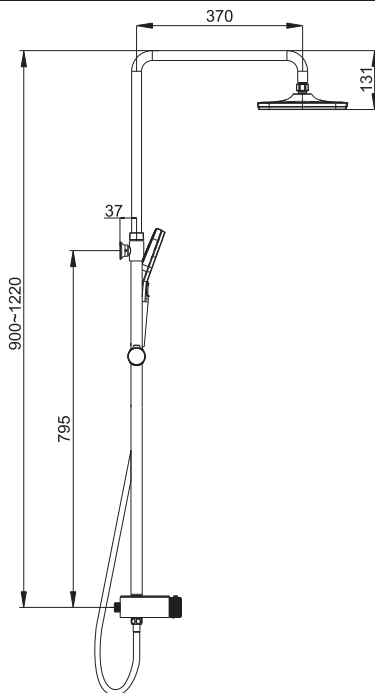

Matters needing attention:

- 1.The product explanation is for installation reference only. There may be differences between different mixers.
- 2.Working Pressure: 0.1-0.5Mpa.
3. Water medium temperature:
Hot water: 55-90°C, Recommended 55-65°C;
Cold water: 5-25°C, Recommended 5-20°C.
- 4.Applicable heating equipment: Air energy water heater, electric water heater.
- 5.Before installation, ensure that the water inlet pipeline is: hot on the left and cold on the right; And flush the pipeline with water for at least 1 minute; So as not to block the mixer after installation and affect the performance of the water outlet.
- 6.Check whether the water supply pipeline is damaged. If necessary, please replace it.
- 7.After installation, connect water to check the sealing performance of the connection to avoid water leakage before use.
- 8.Operating environment should be above 4°C. If below 4°C, the mixer may be deformed and frozen.
- 9.The disposal of scrap shall comply with the requirements of relevant local laws and regulations.

Cleaning care:

To protect the bright and clean mixer, please clean them frequently or regularly.

- 1.Rinse with water only and dry the mixer with cotton cloth.
- 2.Do not use any abrasive detergent, abrasive cloth or paper towel.
- 3.Do not use any detergent with acidic effect, polishing abrasive or rough detergent or soap.