




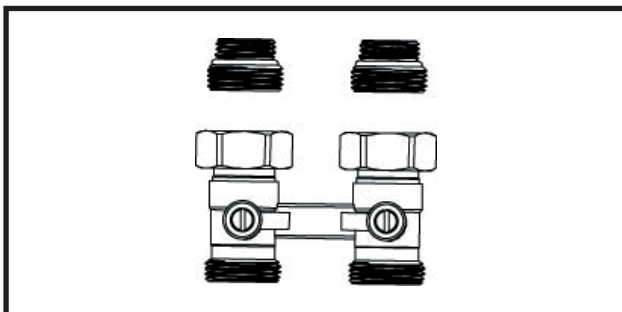


1. Unscrew the fittings from the valve.

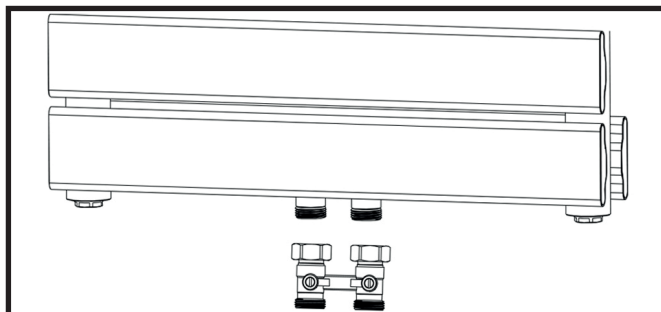


2. Wrap the radiator fitting with Teflon tape.

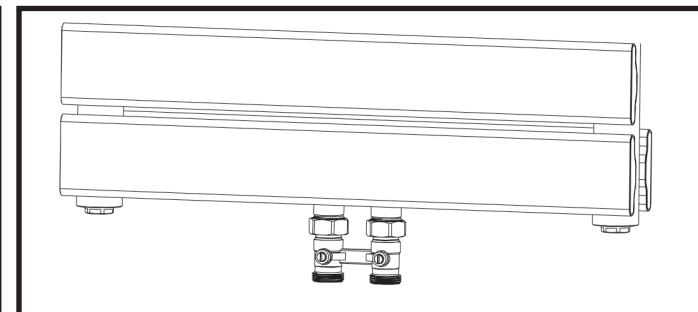

3. Screw the valve onto the radiator fitting and tighten it firmly.

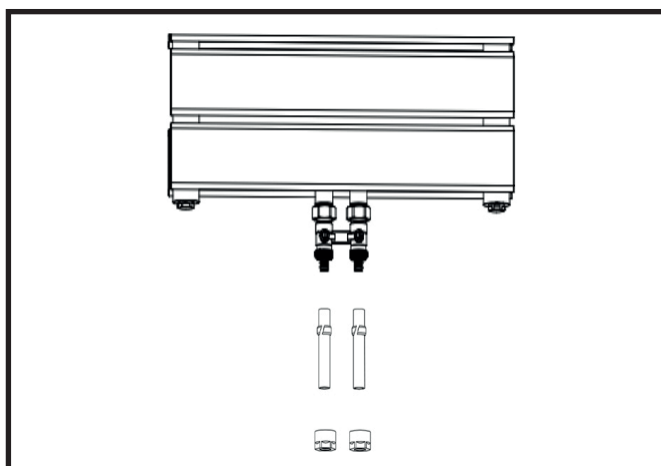

4. Connect the water pipes to the valve.

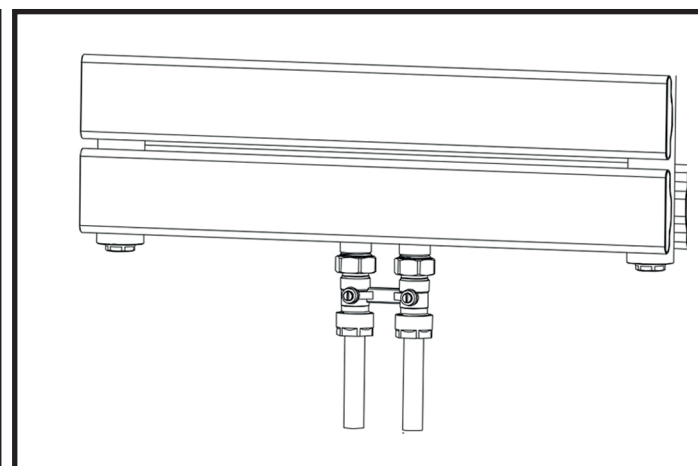

5. Screw the hex nut into the valve and tighten it securely.