


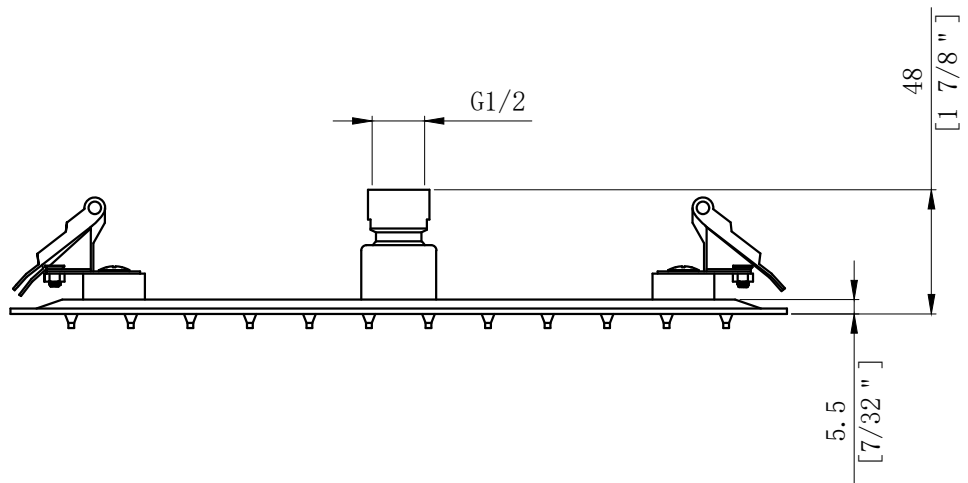


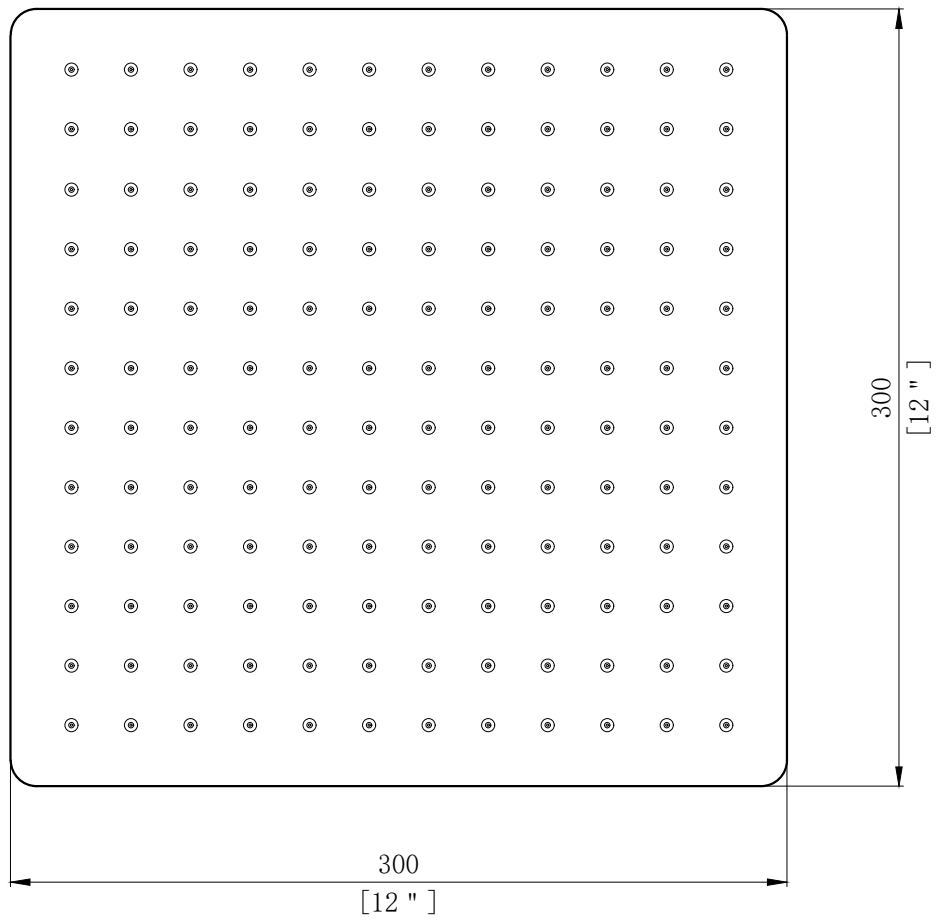


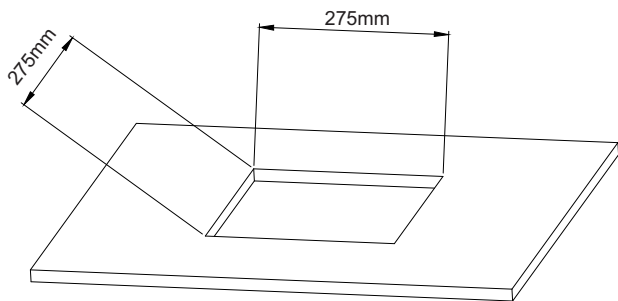


1, Cut the proper opening for the ceiling shower.

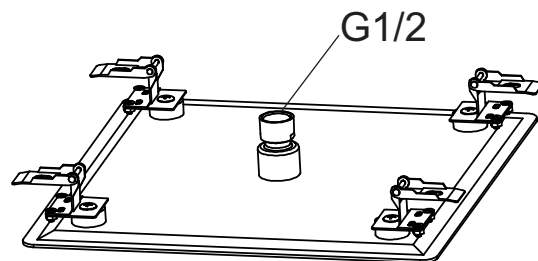

2, Fasten the clips.

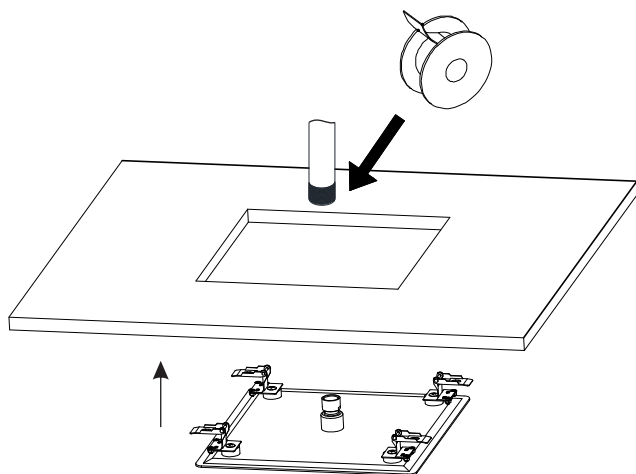

3, Connect to water supply hose, apply teflon if needed.

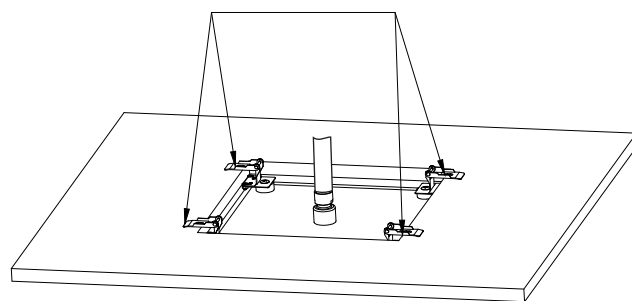

4, Put ceiling board up.