


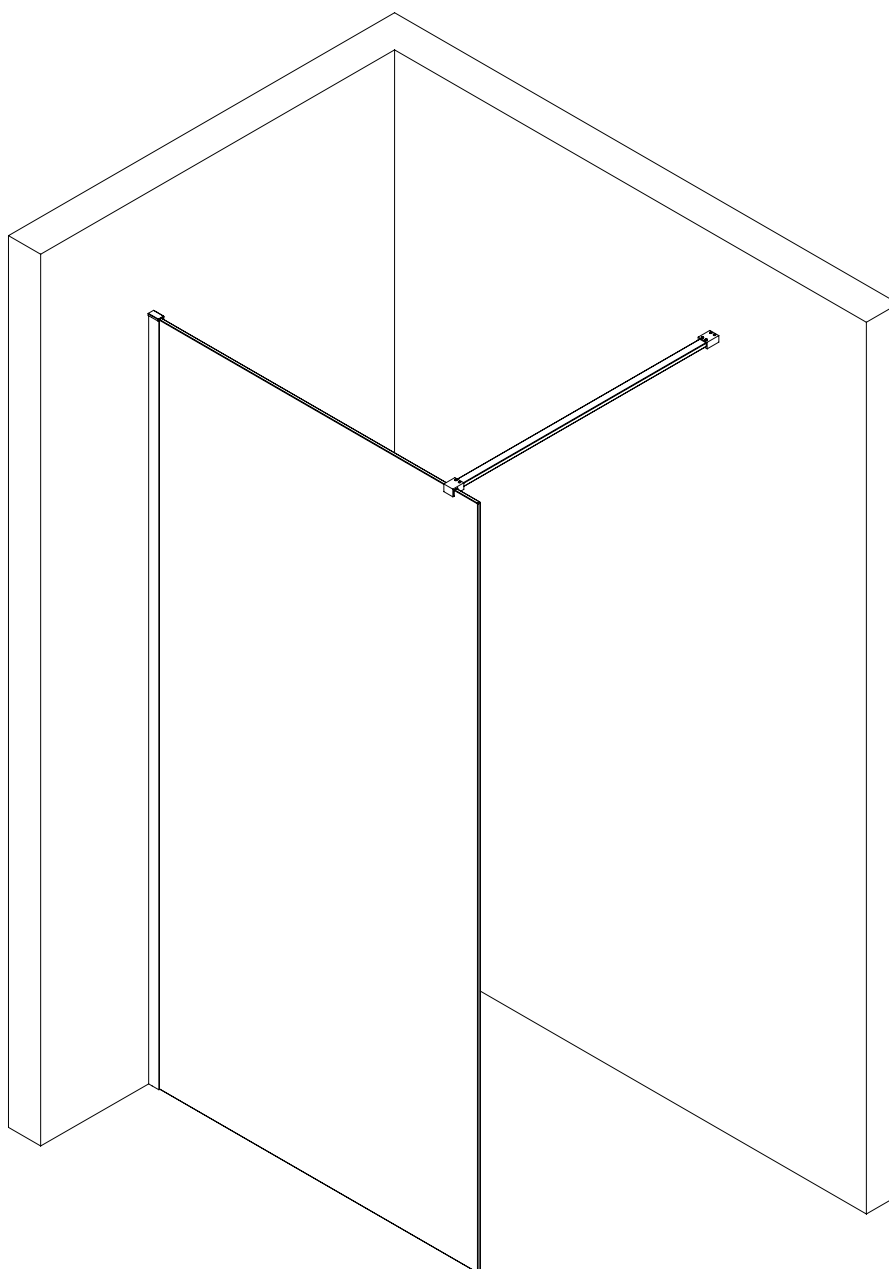
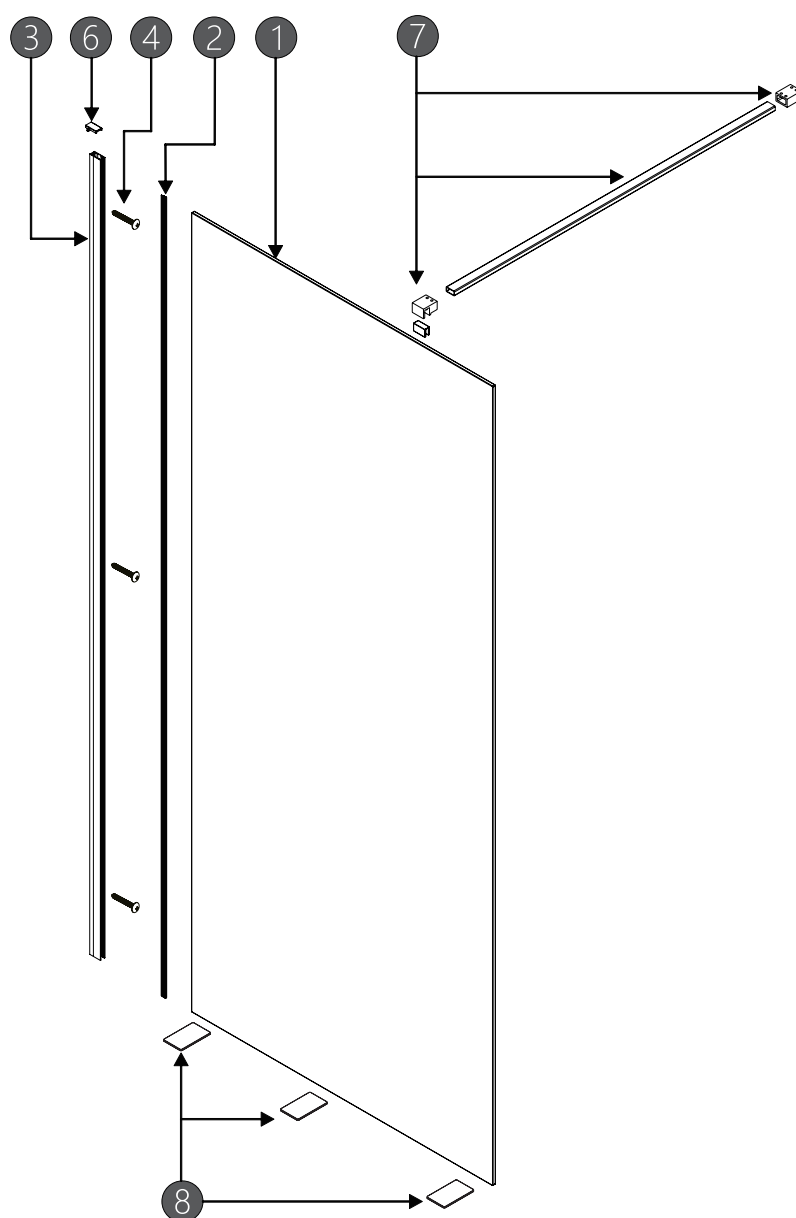
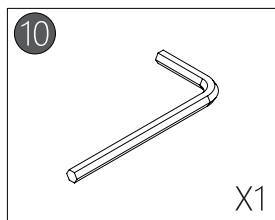
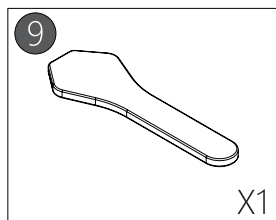
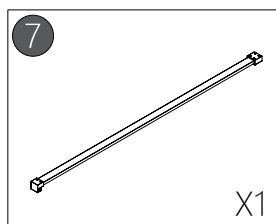
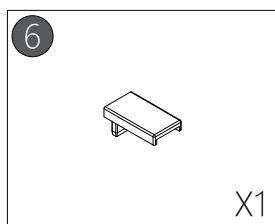
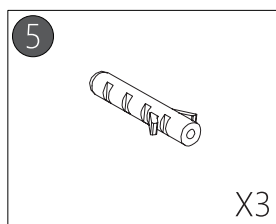
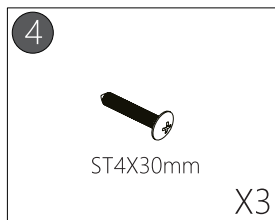
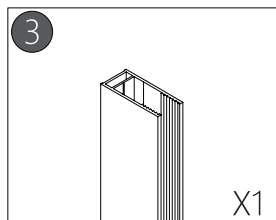
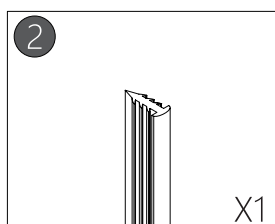
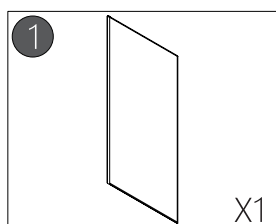
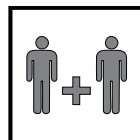
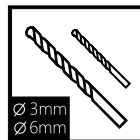


Montage instructies


Instructions de montage







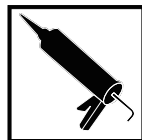


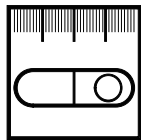

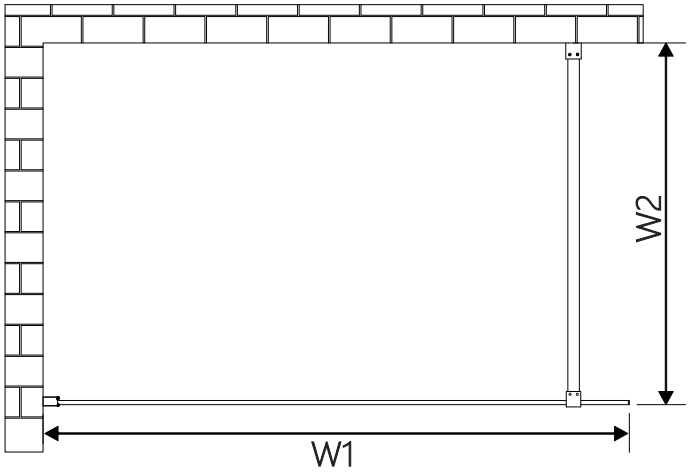

MISURA	W1	W2
500	485-500mm	700-1200mm
600	585-600mm	700-1200mm
700	685-700mm	700-1200mm
800	785-800mm	700-1200mm
900	885-900mm	700-1200mm
1000	985-1000mm	700-1200mm
1100	1085-1100mm	700-1200mm
1200	1185 -1200mm	700-1200mm
1300	1285-1300mm	700-1200mm
1400	1385-1400mm	700-1200mm
1500	1485-1500mm	700-1200mm
1600	1585-1600mm	700-1200mm

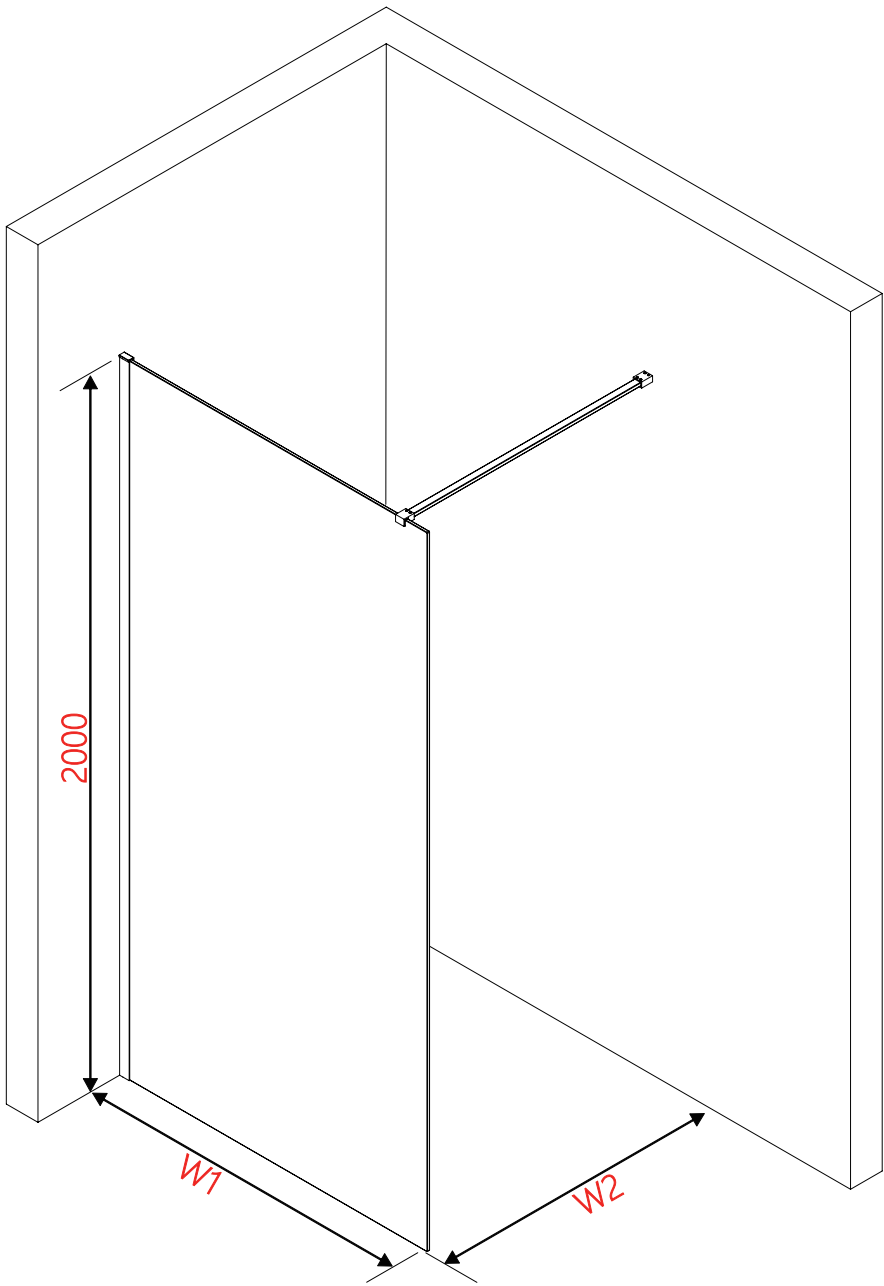

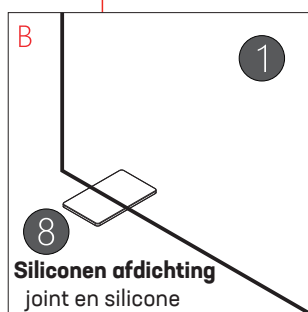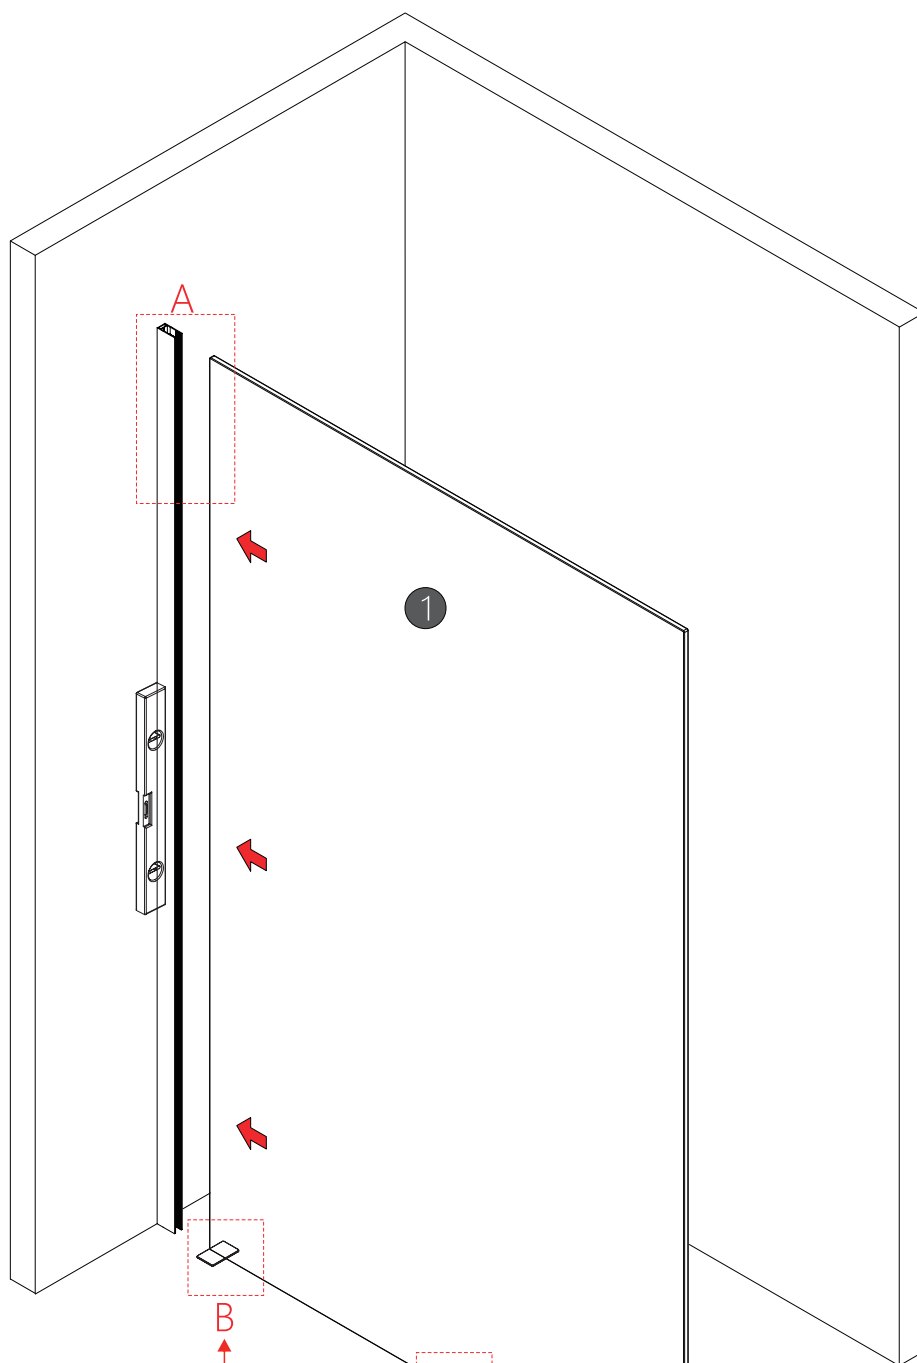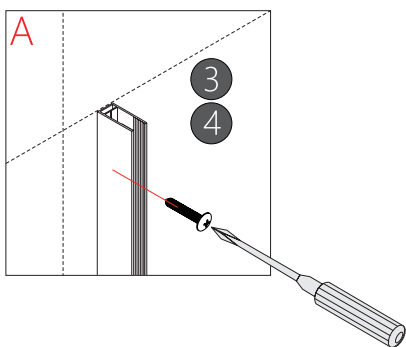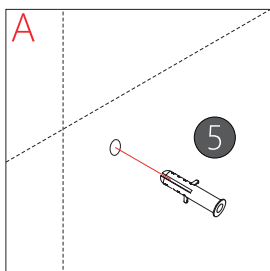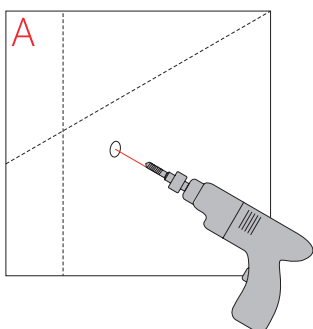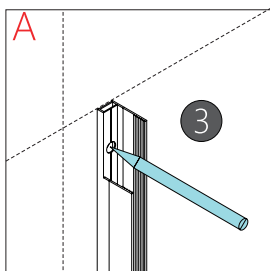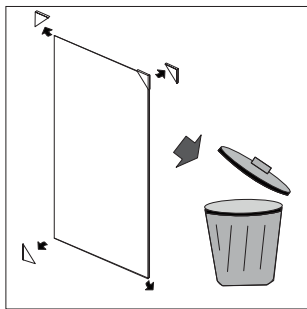

Verwijder de siliconen afdichting nadat het glas is geplaatst.
Retirez le joint en silicone après l'installation du verre.

8



$W2=1200\text{MM}$

$W2 < 1200\text{MM}$

$W2 - 10\text{MM} = D$

