

USER MANUAL

PRELIMINARY REMARK:
The proposals made to the user are to prevent accidents, gas leakages and similar accidents. Please take these recommendations into account in order to avoid serious accidents and damages.

1. The **KAS-TAK** installation must be installed by installers who have successfully completed the training program and have license to install the natural gas piping and/or equipment.
2. Only parts supplied or recommended by **KAS** should be used in the installation.
3. **KAS-TAK** products are not compatible with other manufacturers' systems. If you use **KAS-TAK** products with other manufacturers' products, you may encounter unexpected problems.
4. In **KAS-TAK** installation, usage brochure and local construction rules must be strictly observed.
5. Our company will not accept any liability for misunderstanding or complying with any information contained in the use brochure, whether in accordance with local natural gas indoor installation or engineering specifications.
6. While **KAS-TAK** installation offers important advantages to users and implementers, depending on the situation, to avoid being affected by adverse events such as damaged by any object, lightning strike or electrical load, the implementer must be sure that the system is installed correctly.
7. It should not be used in areas with temperatures above 60 °C
8. It should not be used on the main column side of the gas meter
9. It should not be used in areas where piping or plastic piping can not be fixed
10. Corrosive (bleach, lime, etc.) environments for stainless steels should not be used in areas such as bathrooms, toilets, etc.
11. **KAS-TAK** hoses must be laid in the **KAS-TAK** ducts where the wall is already fixed. The ducts should be fixed at a maximum spacing of 75 cm.
12. The diameter of the corrugated pipe should not be changed by addition and/or reduction. Until TEE-separation, the installation should be one

13. Clamp mounting should be done to fix the used natural gas valves.
14. It is recommended that the wall passes be made through the sheath.
15. Pipe bends should not have angled bends of less than 90°.
16. In all other structures except for individual structures (buildings with an independent unit number of 1), the corrugated pipe must not pass through the atmosphere (from the exterior of the building) area (except the balcony, terrace).
17. The "TEE" material should not be exposed outside the premises, such as on balconies, terraces, or in places where there is a switchover from the exterior of detached buildings.
18. After the meter, the line should enter the residence from the shortest distance. However, in mandatory situations the application of corrugated pipe in the stairwell and / or through the shaft can only be done with the approval of the gas distribution company.
19. In the case of using corrugated pipes in the installation after the the same installation.
20. In the application of flexible hose, additional materials such as linen, natural gas putty, teflon, liquid seal etc. are not used during fitting of the fasteners.
21. Make sure the electrical grounding of the complete piping is done appropriately. Grounding procedure MUST be performed by a certificated electrician and in accordance with EN 15266 or country-based other standard.
22. Nut & ring assembly is for single-use only. In case of incorrect assembly or manufacturing, please change this part with a new "**KAS** nut & ring assembly kit".
23. Do NOT step on the hose. Do NOT hammer the hose.
24. Tighten the fittings by ONLY turning the nuts. Fix the fitting body with the help of another wrench etc. Do not twist the hose by turning it during tightening.
25. Make sure that the hills/corrugations of the hose are intact and NOT deformed during the cutting process by overloading on the hose via the cutting apparatus.
26. Tighten the fittings until the end while NO thread can be seen.

PLUG & RUN

NO ELBOW, NO WELD

EASY & SAFE INSTALLATION
WITH UNIQUE QUICK COUPLING DESIGN

New generation flexible installation system broke the mould of the natural gas installation.



User Manual





HOSE CONNECTION FITTING MOUNTING INSTRUCTION



Hose connection fitting parts




Mounted hose connection fitting parts




The hose should only be cut 360 degrees using the cutting apparatus. It should not be torn off by hand. Cut stone etc. should not be used.




Cutting the hose by apparatus and undressing the outer coating. Can the coating be undressed first, then the cutting shall also be performed.

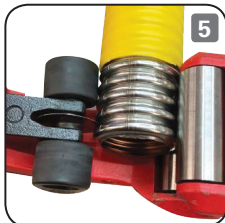


If possible, please use a cutting tool with rubber roller guides. Make sure that the guide rollers are not pressing on the hose corrugations.

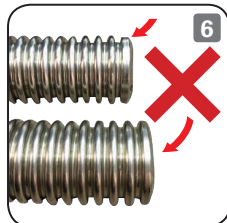

Be sure that, the hill of the corrugation is not flattened / deformed during cutting procedure. If the corrugation is deformed, the functionality of the brass ring will be hindered.

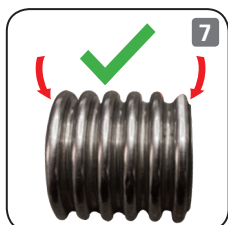

Corrugation at the cutting zone is intact. No deformation occurred.

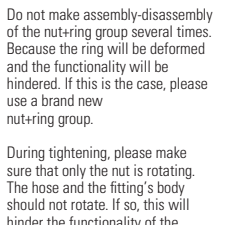

Do not make assembly-disassembly of the nut+ring group several times. Because the ring will be deformed and the functionality will be hindered. If this is the case, please use a brand new nut+ring group.

During tightening, please make sure that only the nut is rotating. The hose and the fitting's body should not rotate. If so, this will hinder the functionality of the sealing mechanism.




After 5 waves / corrugations are undressed




Crushed, incorrectly cut product



Not properly cut product

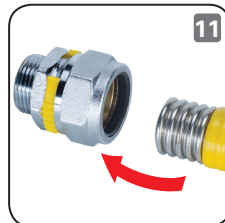

Connection form of hose to connection fitting. **Important note:** Be sure to hear the "click" sound when mounting by hand.

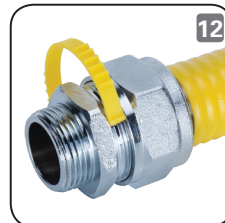


After the click sound, remove the limiter pvc clamp



Mounting with dual wrench



Incorrect Mounting

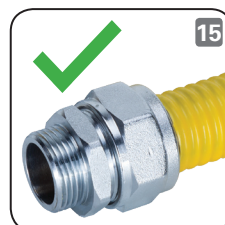


Correct Mounting


Perform the assembly of the hose with the fittings, while the nuts and safety clips are on. If the assembly is performed while they are not on, it can cause the brass ring in the nut to catch more number of waves than necessary and/or the rubber sealing may fall off unknowingly. Both will hinder the functionality.



TEE CONNECTION FITTING MOUNTING INSTRUCTION

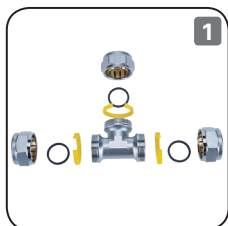

TEE hose connection fitting parts

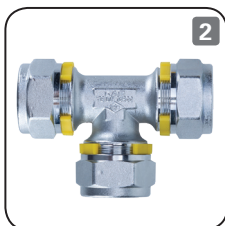


TEE mounted hose connection fitting parts




The hose should only be cut 360 degrees using the cutting apparatus. It should not be torn off by hand. Cut stone etc. should not be used.




Elimination of flexible hose coating by apparatus

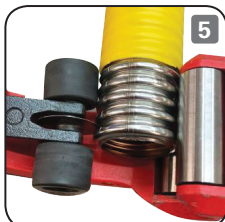


If possible, please use a cutting tool with rubber roller guides. Make sure that the guide rollers are not pressing on the hose corrugations.

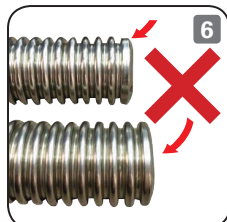

Be sure that, the hill of the corrugation is not flattened / deformed during cutting procedure. If the corrugation is deformed, the functionality of the brass ring will be hindered.

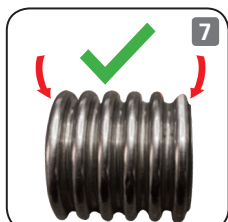

Corrugation at the cutting zone is intact. No deformation occurred.

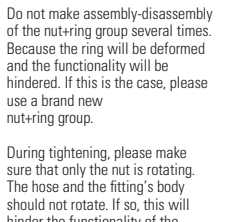

Do not make assembly-disassembly of the nut+ring group several times. Because the ring will be deformed and the functionality will be hindered. If this is the case, please use a brand new nut+ring group.

During tightening, please make sure that only the nut is rotating. The hose and the fitting's body should not rotate. If so, this will hinder the functionality of the sealing mechanism.




After 5 waves / corrugations are undressed




Crushed, incorrectly cut product



Not properly cut product

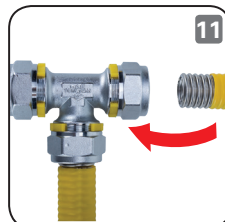

Connection form of hose to connection fitting. **Important note:** Be sure to hear the "click" sound when mounting by hand.

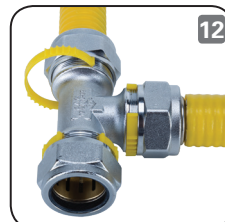

After the click sound, remove the limiter pvc clamp



Mounting with dual wrench



Incorrect Mounting



Correct Mounting

Perform the assembly of the hose with the fittings, while the nuts and safety clips are on. If the assembly is performed while they are not on, it can cause the brass ring in the nut to catch more number of waves than necessary and/or the rubber sealing may fall off unknowingly. Both will hinder the functionality.